











# Curtarra Custom Bamboo Shades Installation Instruction

## Packing List:

Width < 40"	
	Brackets*2
	Wing Nuts*2
	Screws*8

40" < Width < 67"	
	Brackets*3
	Wing Nuts*3
	Screws*12

67" < Width	
	Brackets*4
	Wing Nuts*4
	Screws*16

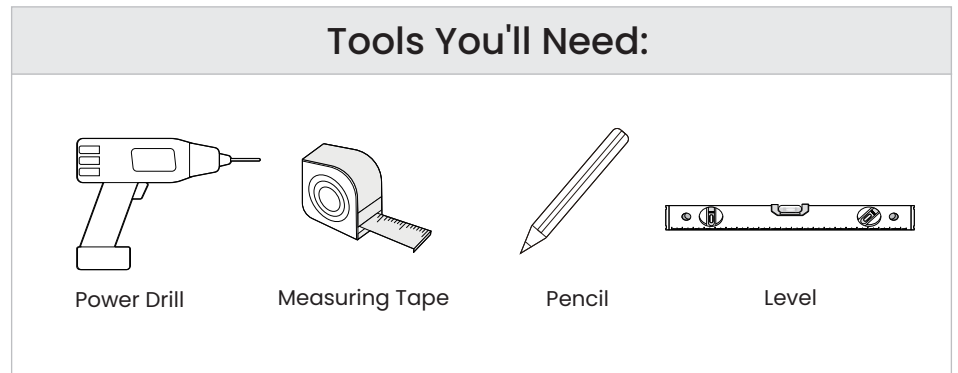

For outside installations, a level is recommended to ensure proper alignment. For inside installations, a level may not be necessary if the window frame is already level, but it can be used for added accuracy.

## Inside Mount



①

Measure the head rail of the BamBoo/Woven Wood shade and measure out the grooves at each side. Double-check those measurements to be sure.



②

Write down the groove measurements. Put the measuring tape inside the window frame and mark where the grooves will go. Make sure the markings are lined up.

# Curtarra Custom Bamboo Shades Installation Instruction



3

Drill holes at the marked spots. We recommend wearing a mask and eye protection when you do so.



4

Secure the brackets into the holes.



5

Lift the shade and align the grooves with the installed brackets. Click them into place.



6

Screw the nut to get the shade into place.



7

You're all set! Your Bamboo/Woven Wood Shade is now installed.



Scan the QR code  
for the installation video.