












Curtarra Custom Bamboo Shades Installation Instruction

Packing List:

Width < 40"	
	Brackets*2
	Wing Nuts*2
	Screws*8

40" < Width < 67"	
	Brackets*3
	Wing Nuts*3
	Screws*12

67" < Width	
	Brackets*4
	Wing Nuts*4
	Screws*16

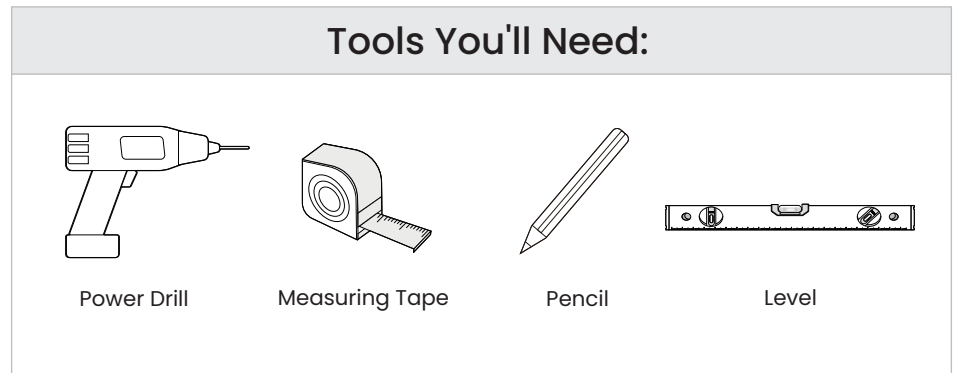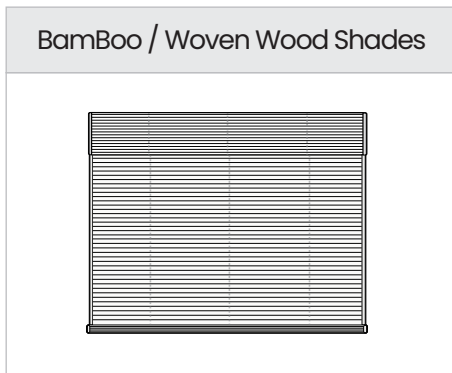

For an outside mount, it's a good idea to use a level to ensure the shades will wind up even. While for inside installation, you can skip the level unless you want to double or triple check everything.

Outside Mount



1

Take measurements of the head rail of the Bamboo/Woven Wood shade and record the grooves. Double-check the numbers.



2

Transfer the measurements with the tape to where you want the shade to go. Mark the grooves. Make sure the markings are aligned.

Curtarra Custom Bamboo Shades Installation Instruction



3

Drill holes at the marked spots. Be sure to wear a mask and eye protection while drilling.




4

Install the brackets into the drilled holes.



5

Lift the shade and line the grooves up with the installed brackets.

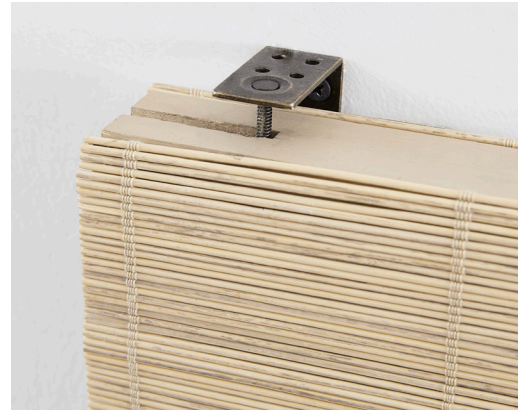

6

Snap the shade into place.



7

Secure the nut to lock the shade into position.



8

That's it! Your Bamboo/Woven Wood Shade is now fully installed!