


Curtarra No Drill Bamboo Shades Installation Instruction

Packing List:

Bamboo/Woven Wood Shade

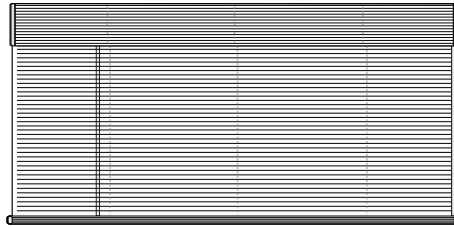

Inside Mount Only



1

Loosen the screws on both brackets so the rubber-tipped grips can slide left and right.



2

Fit the shade into the window frame.



3

Tighten the screws on both brackets until the rubber-tipped grips press firmly against the inside of the window frame.



No Drill Bamboo Shade Install QR