








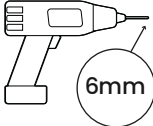






John Custom Curtain Rods Installation Instruction

Packing List:

	Rods		Finial*2
	Pre-installed Brackets*2		Screws*6
			
	Silent Sliding Curtain Rings		Allen Wrench


Tools You'll Need:

				
Screwdriver	Drill	Level	Pencil	Measuring Tape

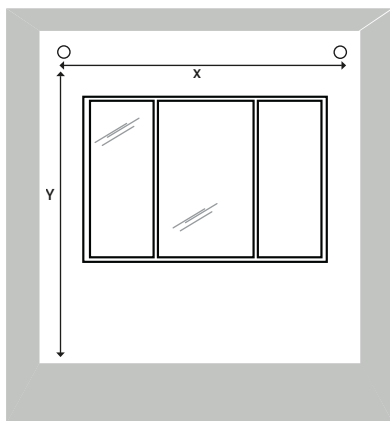

1


1. Double-check the position.

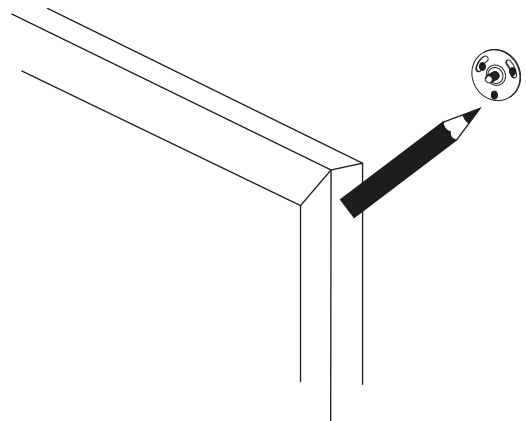

2


2. Remove the bracket base from the pre-installed brackets, then mark the bracket position with tools.

John Custom Curtain Rods Installation Instruction

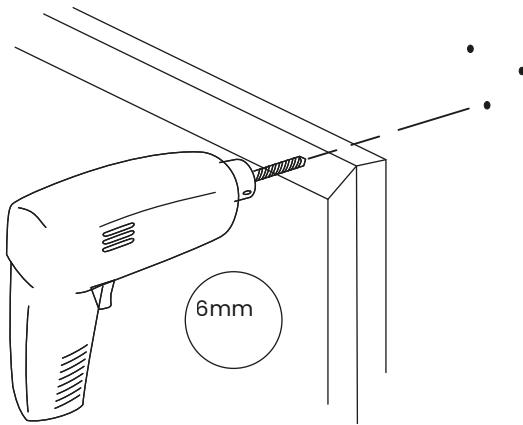


3

3. Drilling.

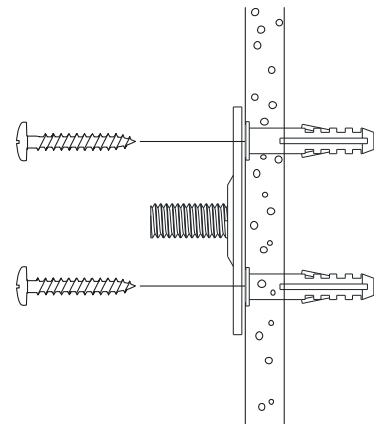


4

4. Install the bracket fixing.

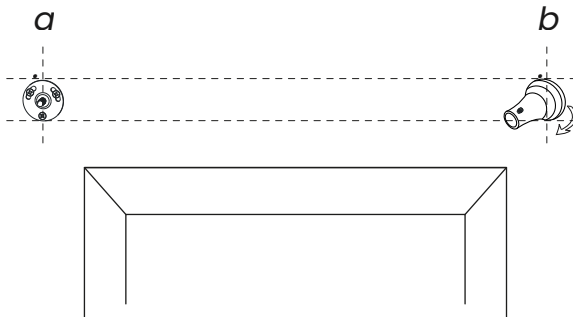


5

5. Install the bracket base.

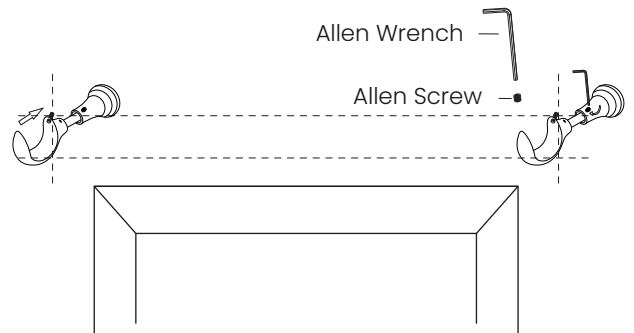


6

6. install the bracket onto the base.

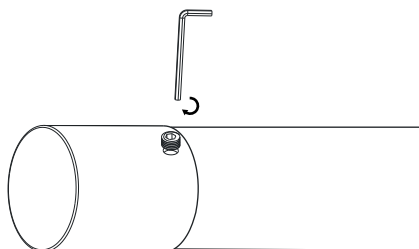

7


7. Use the allen wrench to secure the finial to the rod.

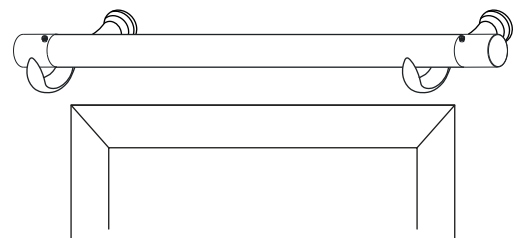

8


8. Place the rod onto the brackets.

John Custom Curtain Rods Installation Instruction

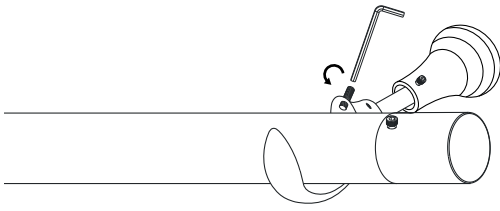

9

9. Then secure it with small screws. (If curtain rings are required, please insert them onto the rod before securing it.)

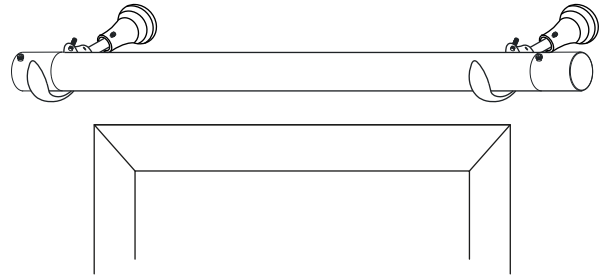

10

10. All done! You can now hang your curtains on the rod.