

Window Valance Installation Instruction


Board Mounted:

Packing List:


Valance & Velcro



Tools You'll Need:




Board (the size should match your valance)

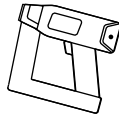

Nail Gun



2 Corner Brackets

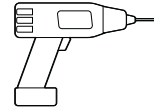

Screwdriver



Some Screws

If your window already has a curtain box, you won't need to use the wooden board as the installation point for the valance.

Inside Mount



1

1. Stick the Velcro onto the wooden board, covering three sides.



2

2. Use a nail gun to fix the Velcro to the board.



3

3. Mark the installation position of the corner brackets on the wall and the wooden board.



4

4. Mount the wooden board onto the wall using the corner brackets.

Window Valance Installation Instruction



5

5. Attach the window valance to the wooden board by sticking it onto the Velcro.



6

6. All done.

Rod Mounted:

Packing List:

Valance



Tools You'll Need:



Rod & Brackets (1-1.5" diameter, the length should match your valance)



Screwdriver



Some Screws

Inside Mount



1

1. Slide the valance onto the rod, ensuring it hangs neatly and securely.



2

2. Install the rod.